



# Cashmaster **one**

pro

plus

max<sup>®</sup>

The **one** you can count on

 
For more help and the full user manual please scan the above QR code or visit our website.

[cashmaster.com](http://cashmaster.com)


## Cashmaster One<sup>®</sup> Quick Start Guide




### What's in the box?

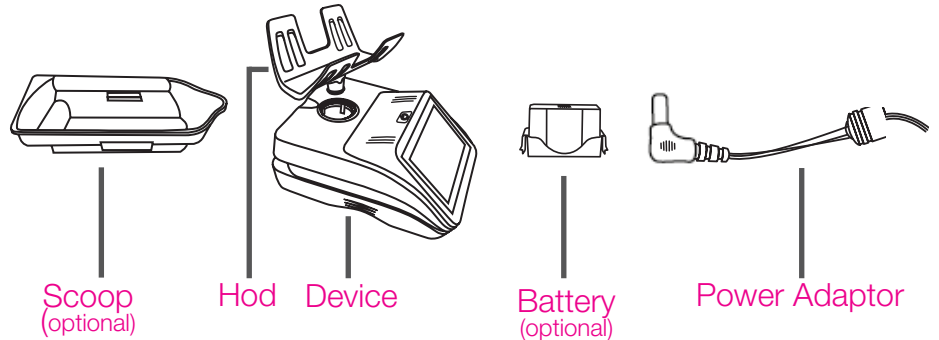

### Setting up your Cashmaster One<sup>®</sup> device

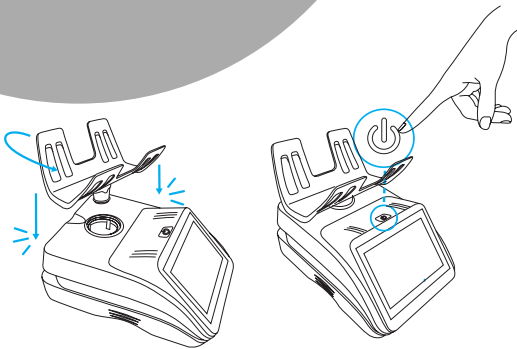 


 1. Place the counter on a stable surface.
2. Install the hod
  - a) Insert the hod into the counter.
  - b) Gently twist the hod and push down until the hod clicks into position.
3. Switch your Cashmaster One on.

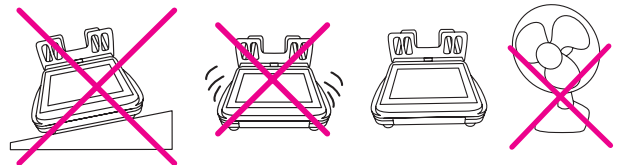

#### Cashmaster device tips

 
1. Charge the device for 6 hours before first use, if a battery is installed.
2. A fully charged battery lasts for up to 8 hours with normal use.
3. Only use the device power adaptor provided.
4. Always place the device on a stable and level surface, that is free of excessive vibrations.
5. Don't place the counter near air-conditioning systems or excessive drafts.

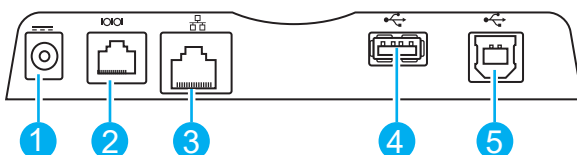


Item	Description
1	External Power Adaptor
2	External Printer
3	Ethernet Port (Cashmaster One Max)
4	USB (Software Updates)
5	USB (PC Connectivity)

# Using your Cashmaster One® device
 
## Navigation

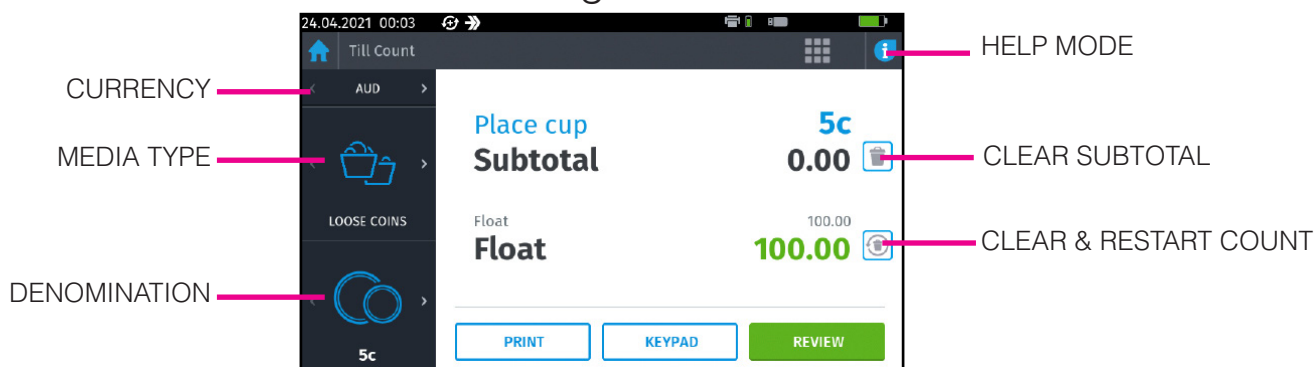

## Counting Coins

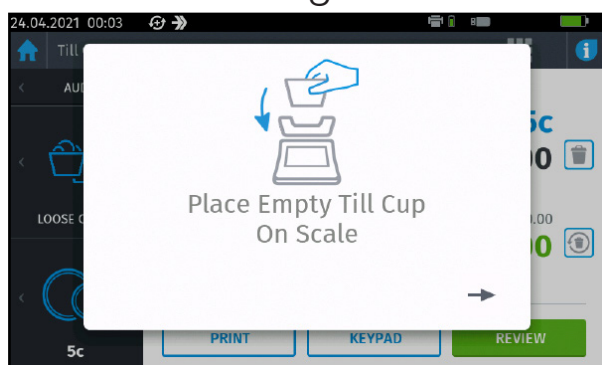 

### Calibrating Coin Container

The first time you select count mode you will be asked to place the empty coin scoop or till cup on the hod.

 
### Recalibrating Coin Container

While in count mode, select loose coins media type and press the power button. Continue to select COIN CONTAINER and place the empty coin scoop or cup onto the hod.

### Counting Coins

1. Loose coins must be counted using the scoop or till cups.
2. Bagged/rolled coins should be placed directly onto the hod. Denominations are automatically detected by the counter.

## Counting Notes

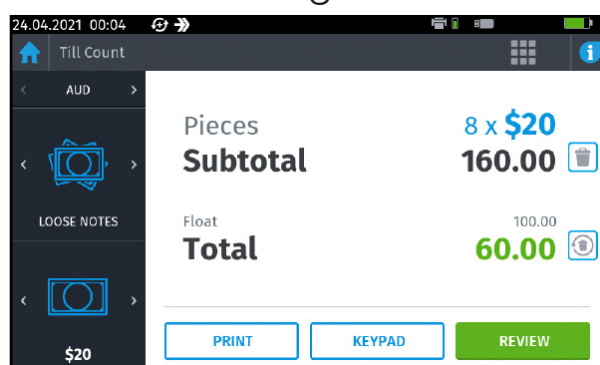

### Counting Notes

1. Place notes of the same denomination.
2. Stack notes on the hod in batches (see counting tips for slice limits).
3. If the 'Too many, remove some' message appears, simply remove a couple of notes until the message clears and then add the notes back onto the hod.

## Cashmaster Counting Tips

- Always sort money before counting and do not count mixed denominations.
- The device will automatically add the value to the running total and move on to the next denomination once the item is removed from the counter.
- For maximum speed and efficiency when counting loose banknotes:
  - AUD: Place approx. 20 banknotes onto the counter at a time (10 pcs for \$100).
  - NZD: Place approx. 40 banknotes onto the counter at a time (10 pcs for \$100).
- Note and voucher 'slices' can be stacked upon the hod up to a maximum combined weight of 1.5kg (3.3lbs).
- When counting bagged/rolled coins, denominations are automatically detected by the counter.
- Bagged/rolled coins can be stacked directly on to the hod, but must be added one at a time. The counter has a maximum weight limit of 1.5kg.
- Loose coins must be counted using the scoop or till cups.