




For use with the Cashmaster One product range

Space saving integrated printer - fits into your Cashmaster One device

Small and quiet

More energy efficient

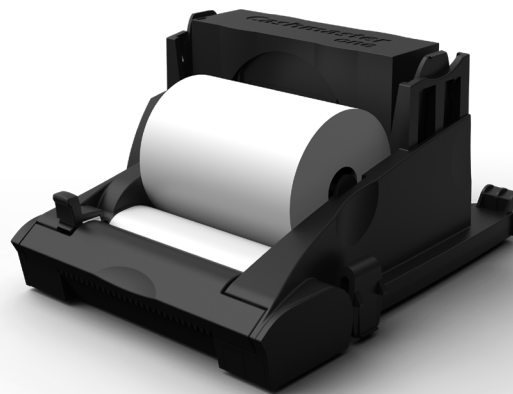

*For use with our new range*

Cashmaster **one** **pro** **plus** **max**™

## Cashmaster *printer one*

The Cashmaster Printer One for the Cashmaster One product range

The Cashmaster Printer One is smaller, quieter and more energy efficient than its predecessors. Designed specifically for use with the Cashmaster One range, attach the Cashmaster Printer One with one single click to the base of your device.

No cables or additional worktop space is required, meaning your Cashmaster One device remains fully portable and you can use it whenever you need to.

**North America**  
t: +1 877 227 4627  
inquiriesusa@cashmaster.com

**Hong Kong and Asia**  
t: +852 2157 9363  
enquiriesasia@cashmaster.com

**Germany**  
t: +49 (0) 2463 999 339  
germany@cashmaster.com

**UK and all other customers**  
t: +44 (0)1383 416 098  
enquiries@cashmaster.com