



# Cashmaster **one** <sup>pro</sup>

**plus**


The **one** you can count on <sup>max</sup>

For more help and the full user manual please scan the above QR code or visit our website.  
cashmaster.com


## Cashmaster One<sup>®</sup> Quick Start Guide




### What's in the box?

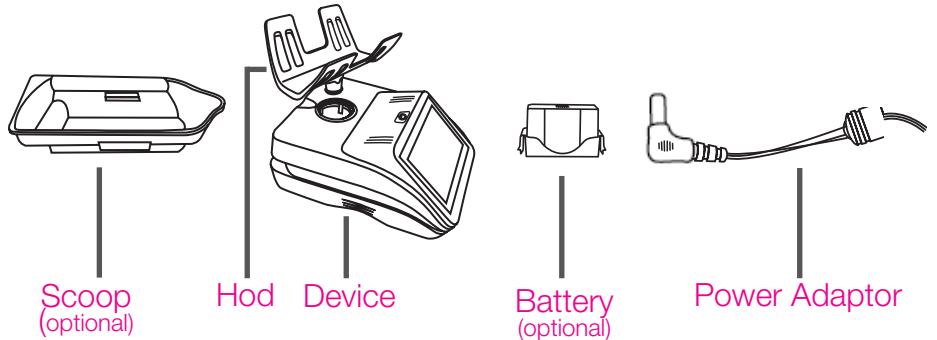

### Setting up your Cashmaster One<sup>®</sup> device

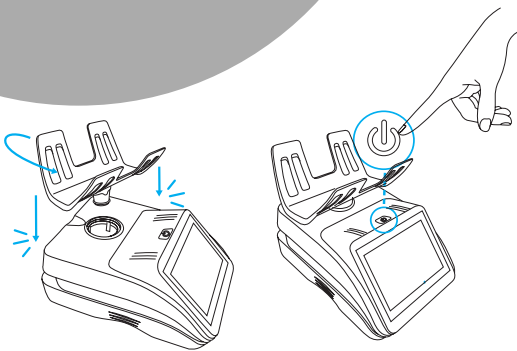


1. Place the counter on a stable surface.
2. Install the hod
  - a) Insert the hod into the counter.
  - b) Gently twist the hod and push down until the hod clicks into position.
3. Switch your Cashmaster One.

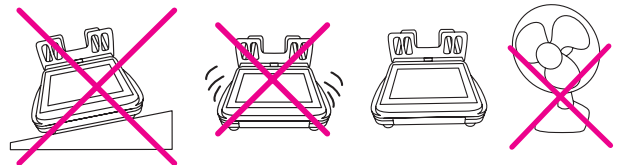

#### Cashmaster device tips


1. Charge the device for 6 hours before first use, if a battery is installed.
2. A fully charged battery lasts for up to 8 hours with normal use.
3. Only use the device power adaptor provided.
4. Always place the device on a stable and level surface, that is free of excessive vibrations.
5. Don't place the counter near air-conditioning systems or excessive drafts.

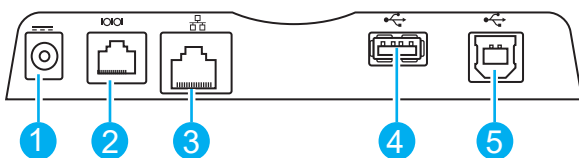


Item	Description
1	External Power Adaptor
2	External Printer
3	Ethernet Port (Cashmaster One Max)
4	USB (Software Updates)
5	USB (PC Connectivity)

# Using your Cashmaster One® device

## Navigation

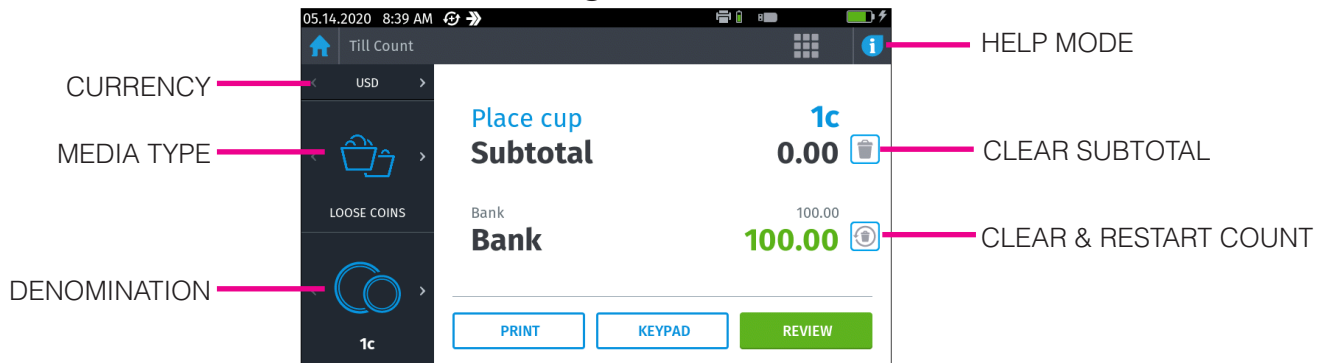

## Counting Coins

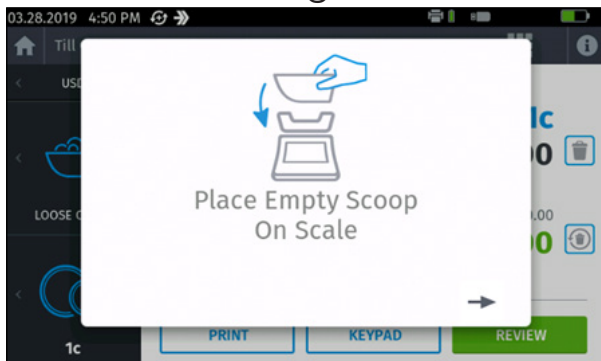

### Calibrating Coin Container

The first time you select count mode you will be asked to place the empty coin scoop or till cup on the hod.


### Recalibrating Coin Container

While in count mode, select loose coins media type and press the power button. Continue to select COIN CONTAINER and place the empty coin scoop or cup onto the hod.

### Counting Coins

1. Loose coins must be counted using the scoop or till cups.
2. Coin roll denominations are automatically detected by the scale (US ONLY).
3. For CAD coin rolls, key in the quantity of each denomination instead of placing them on the counter (Plus/Max ONLY).

## Counting Bills

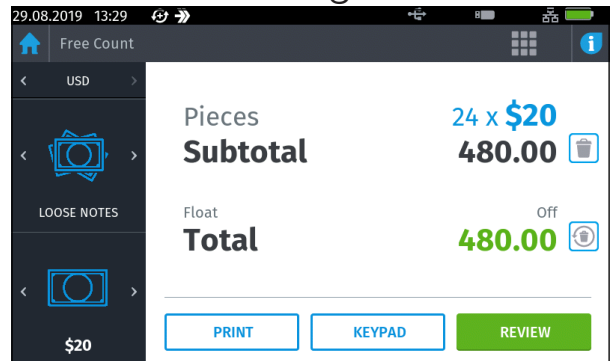

### Counting Bills

1. Place bills of the same denomination.
2. Stack bills on the hod in batches of up to 30 pieces.
3. If the 'Too many, remove some' message appears, simply remove a couple of bills until the message clears and then add the bills back on to the hod.

## Cashmaster Counting Tips

- Always sort money before counting and do not count mixed denominations.
- Pennies are a blended weight of the new and old penny which may result in a small, tolerable inaccuracy due to this variation. (US ONLY).
- The device will automatically add the value to the running total and move on to the next denomination once the item is removed from the counter.
- For loose bills and vouchers, the maximum number of items that can be placed on the hod in one 'slice' is 30.
- Bill and voucher 'slices' can be stacked upon the hod up to a maximum combined weight of 1.5kg (3.3lbs).
- When counting coin rolls, denominations are automatically detected by the scale.
- Coin rolls can be stacked upon the hod, but must be added one at a time. The counter has a maximum weight limit of 1.5kg (3.3lbs).
- Loose coins must be counted using the scoop or till cups. To ensure accurate counting of CAD \$1 and \$2, the maximum number that can be added to the scoop in one 'slice' is 9 and 18 pieces respectively.
- Best practice to key in the quantity of CAD coin rolls for each denomination (CAD ONLY)(Plus/Max ONLY).